



JOWETT JUPITER / JAVELIN

### OIL FILTER ADAPTOR FITTING INSTRUCTIONS

**Please** read all the instructions before starting work on your car.

The kit contains:

- Large sealing ring
- Locating bolt
- Copper washer
- Aluminium adaptor plate
- Oil filter

*(This diagram is for illustration purposes only)*



Remove the bolt, bowl, and original filter. Remove the oil seal which sits in the groove in the filter head and clean the groove. Remove the steel boss by inserting a tommy-bar through the hole in the side of the boss and unscrewing it.

Place the new seal in the groove in the filter head. Using the copper washer insert the locating bolt (supplied with this kit) through the adaptor plate making sure that you have both the adaptor plate and the bolt positioned correctly. (The coarser thread on the bolt screws into the filter head; the narrower face of the plate bears on the oil seal.) Screw the bolt securely into the filter head.

With your adaptor use a Crosland 659 filter or Unipart GFE173, which provides a little more clearance, making fitting and removal easier (or similar high quality filter with a 3/4UNF thread). Change the filter at the originally recommended intervals.

Ask for details on oil coolers, flexible oil and fuel lines, fuel filters, and braided stainless steel brake hoses for your Jowett available from the Jupiter Owners' Club, or direct from Flexolite.